

Display



Home Robots App



K'ARCHER

RCF 3 QUICKSTART GUIDE

Scan for details



www.kaercher.com/int/home-garden/robot-vacuums-and-mops.html

Operating Instructions



On/Off

Press for start, pause, turn off (5 sec)
Press together with Home (5 sec) for WiFi connection



Home

Press to send robot to station
Press together with On/Off (5 sec) for WiFi connection



Robot state

Off: device off or in sleep mode
Yellow: Standby Mode
Blue: device cleans
Red: error indication
For more LED signals see user manual



Battery

Off: device off or in sleep mode
Green (breathing): Fully charged (charging)
Yellow: 10-29% battery capacity
Red blinking: <10% battery capacity



WiFi

Off: device off or not connected
Blue: Online
Blue breath: Reset WiFi / Connecting to WiFi
Red blinking: Offline



Min fresh water

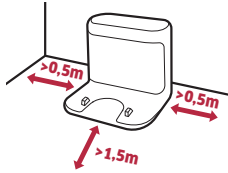
Blue blinking: Fresh water tank empty

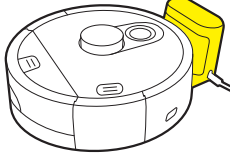


Max dirt water

Red blinking: Dirt water tank full






Install device

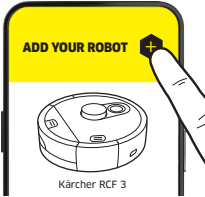
- 

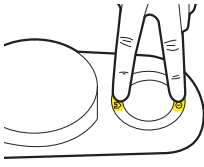
Consider correct positioning
- 

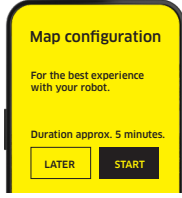
Place robot on charging station

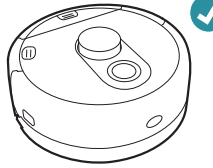
- Download Home Robots App

- 

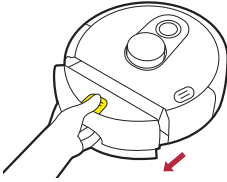
Add robot
- 

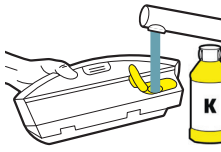
Press On/Off and Home to connect to WiFi
- 

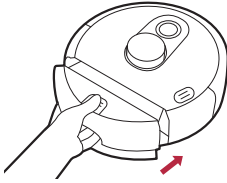
Follow the configuration steps in the App
- 

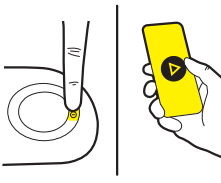
Device is now ready for use

Start cleaning

- 

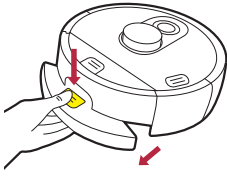
Detach tank unit
- 

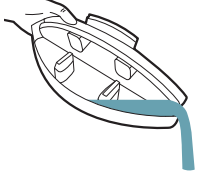
Fill fresh water tank with water and detergent
- 

Attach tank unit
- 

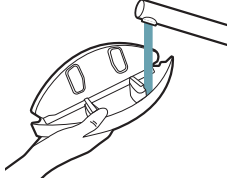
Turn on device

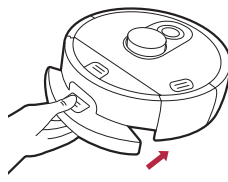
Cleaning of device

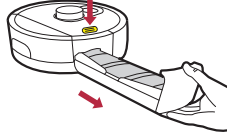
- 

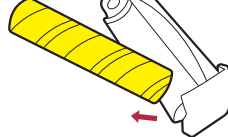
Detach dirt water tank
- 

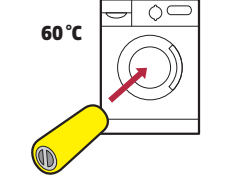
Empty dirt water tank

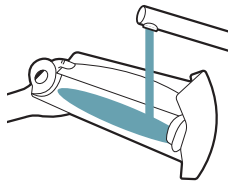
- 

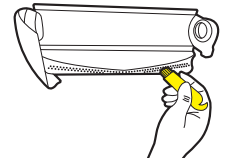
Clean dirt water tank
- 

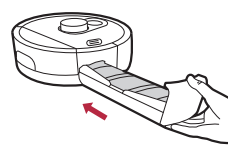
Attach dirt water tank
- 

Remove roller unit
- 

Detach roller
- 

Wash roller in washing machine
- 

Clean roller unit
- 

Clean hair comb
- 

Attach roller unit

